

# ACONCAGUA 3.0

IT Istruzioni di montaggio

EN Fitting instructions

DE Montageanleitung

FR Instructions de montage

ES Instrucciones de montaje

BG инструкции за сглобяване

CS Návod na montáž

DA Monteringsvejledning

EL Οδηγίες συναρμολόγησης

ET Paigaldusjuhend

FI Asennusohje

HR Uputa za sastavljanje

HU A felszerelés módja

LT Pritvirtinimo instrukcijos

LV Stiprināšanas instrukcija

NL Instrukcja montażu

NO Monteringsveiledning

PL Instrukcja montażu

PT Instruções de Montagem

RO Instrucțiuni de montare

RU Инструкции по установке

SK Návod na montáž


SL Navodila za pritrjevanje

SV Monteringsanvisning

TK Uydurma talimat



ZH 裝修指導







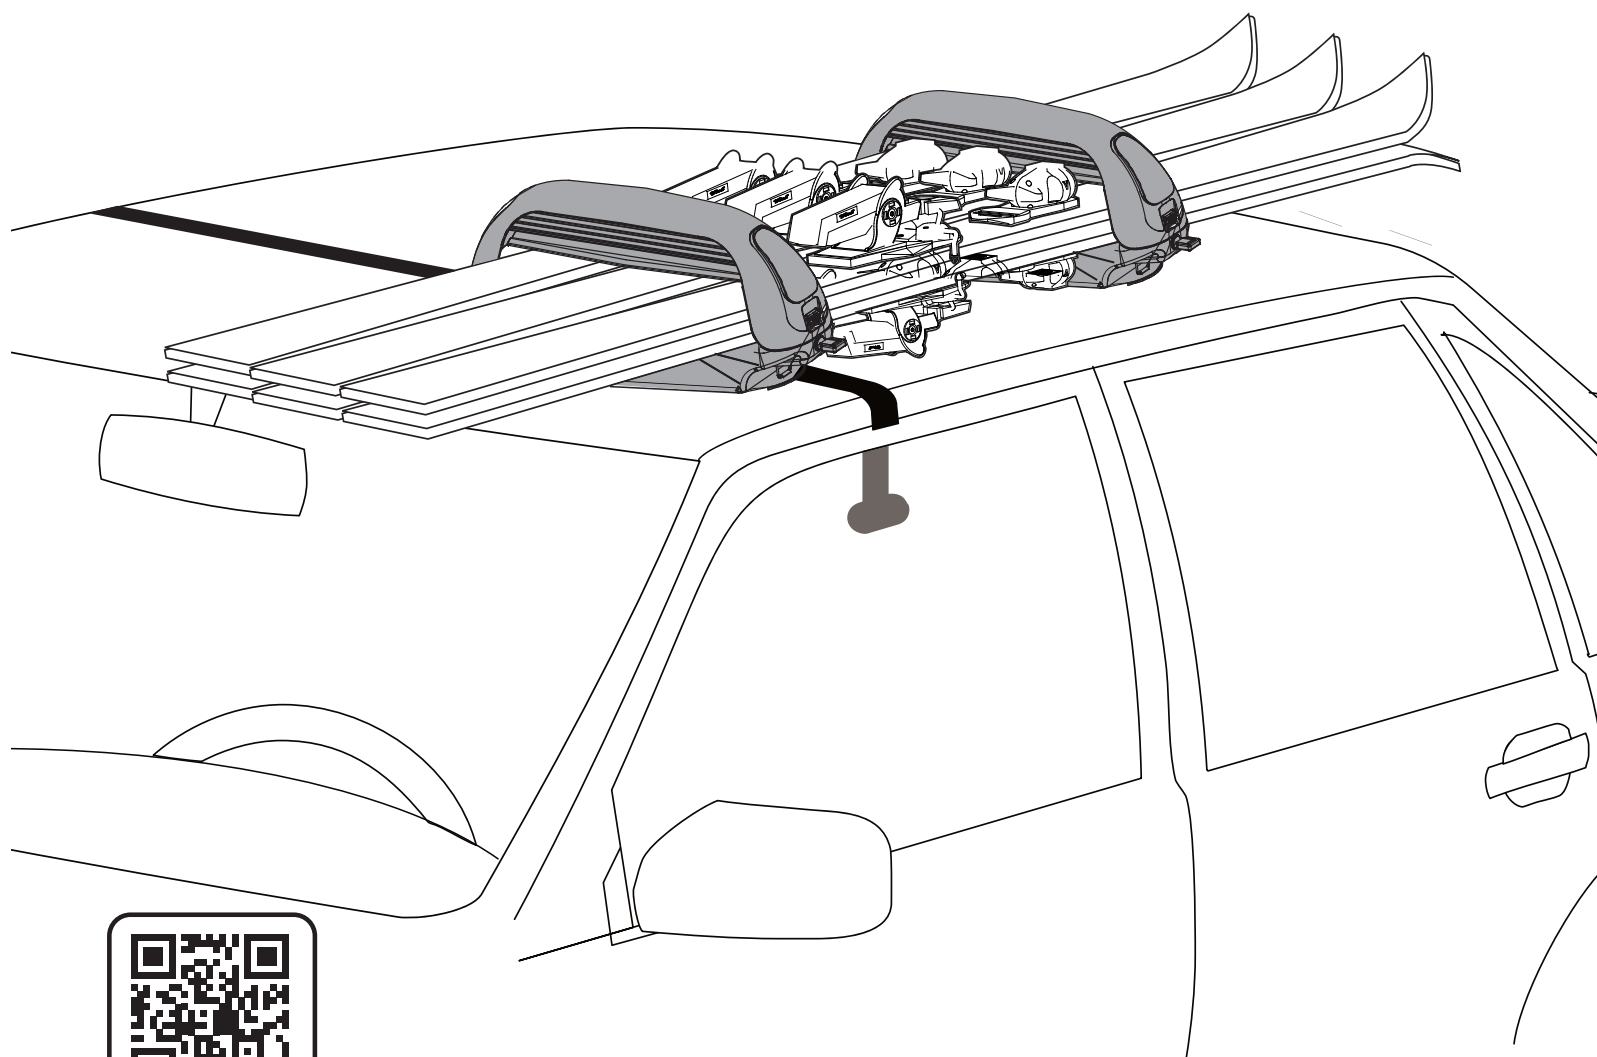
AR تعليمات التجميع














Made in Italy




N.	[IT] Ricambi (A Richiesta) [EN] Spare Parts (Made to order) [FR] Pièces de rechange (Sur commande) [DE] E Teile (auf Anfrage) [ES] Piezas de recambio (Previa solicitud)	Q.	Codice-Code-Código
1	 XXXX	2	700010300000
2		1	700016300000





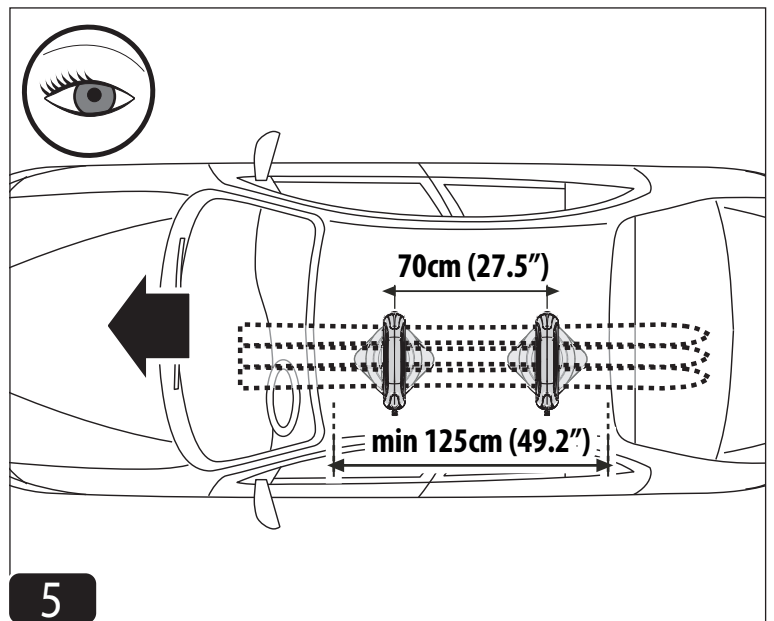
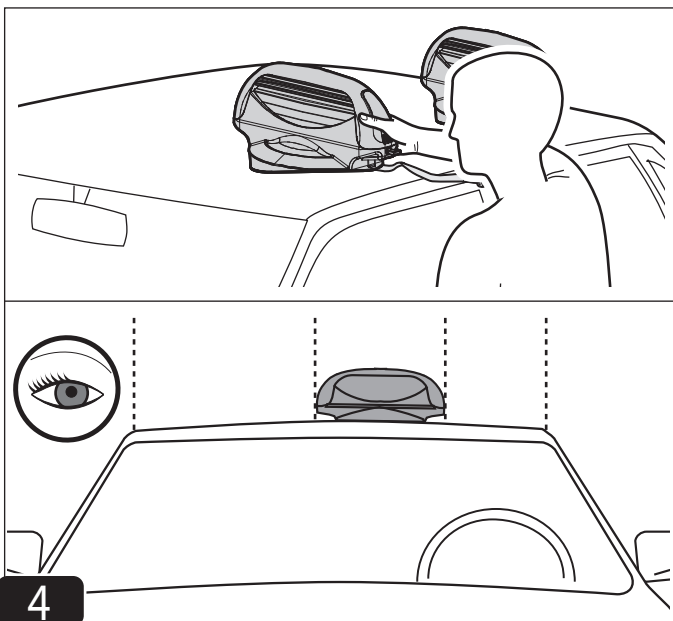
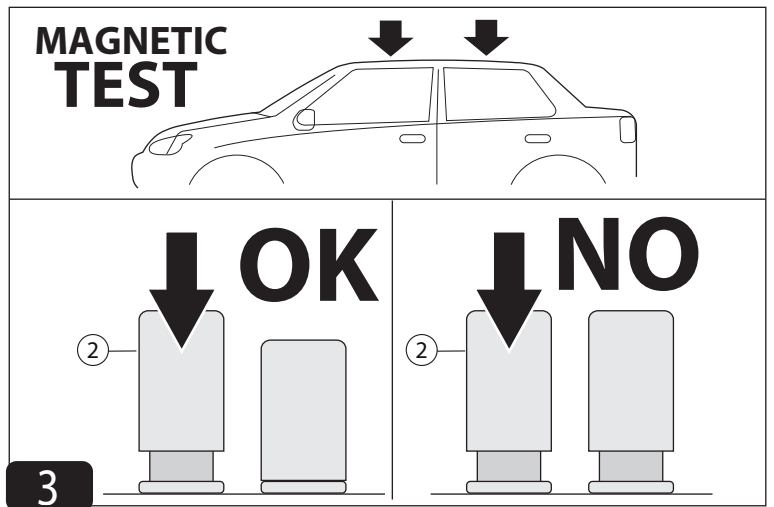
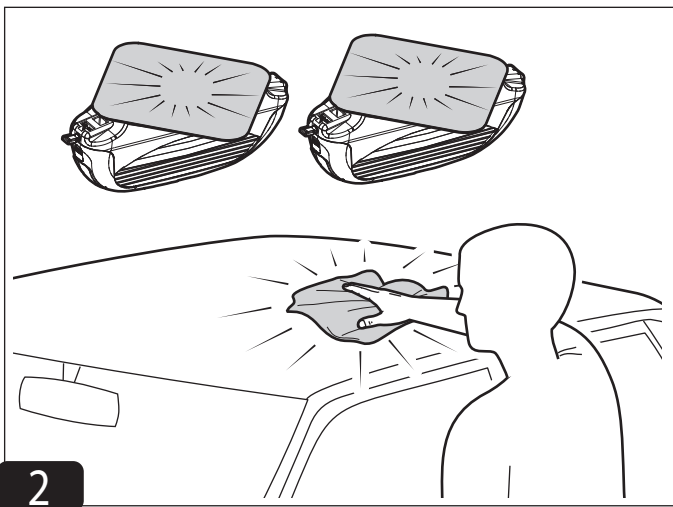
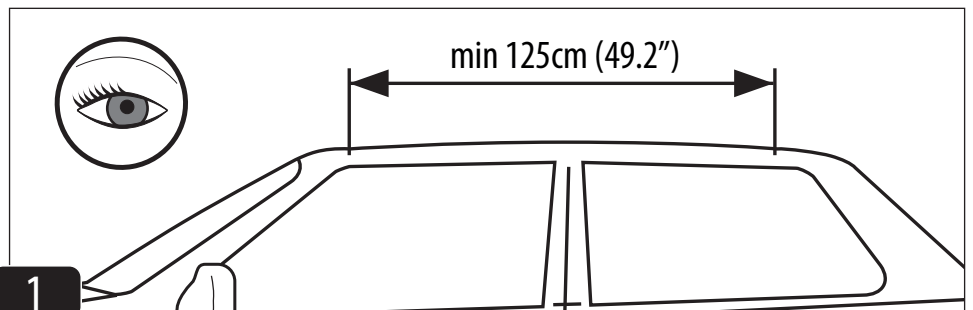
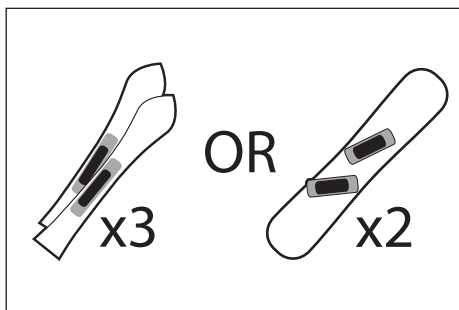
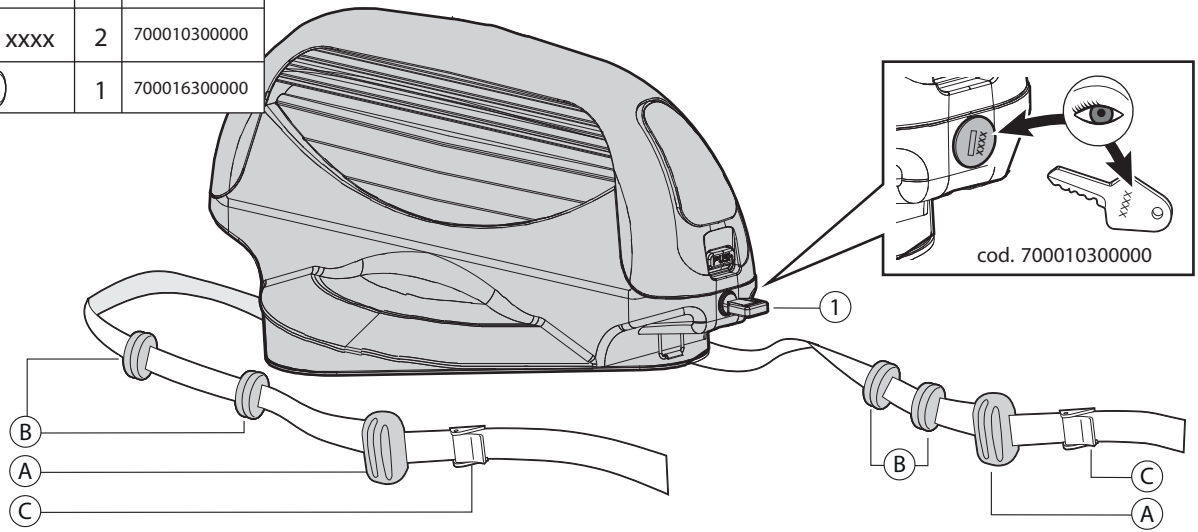


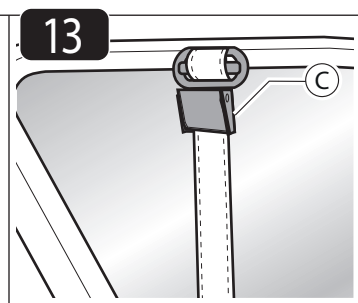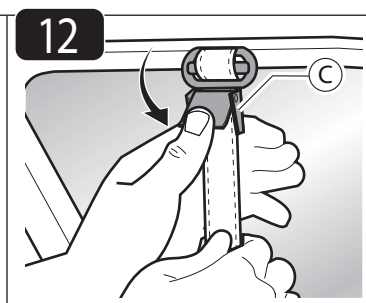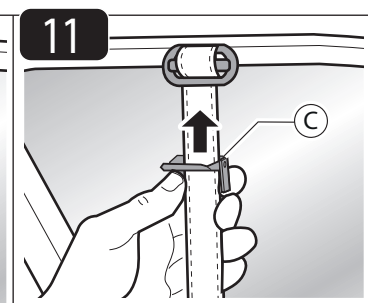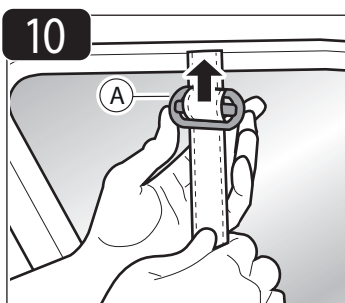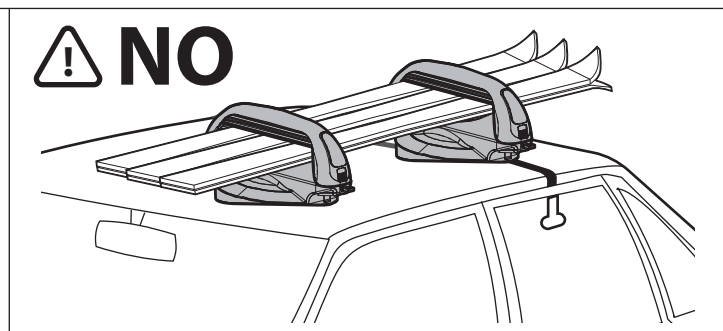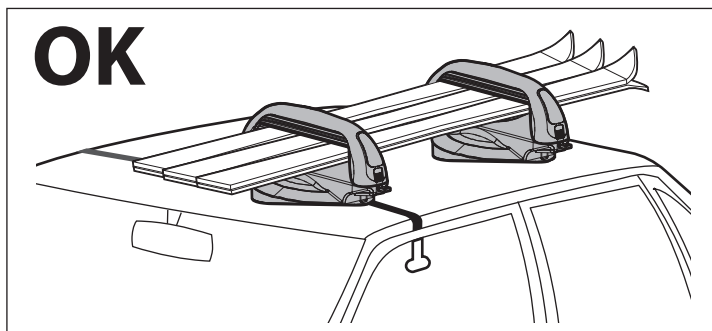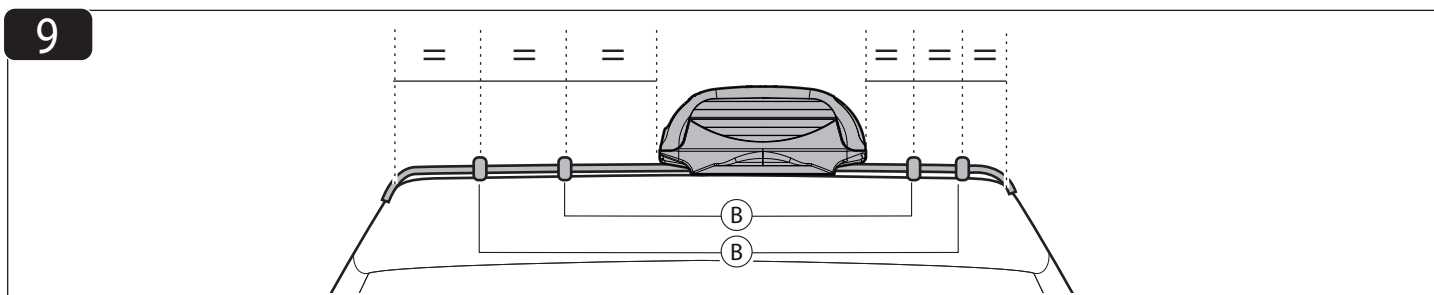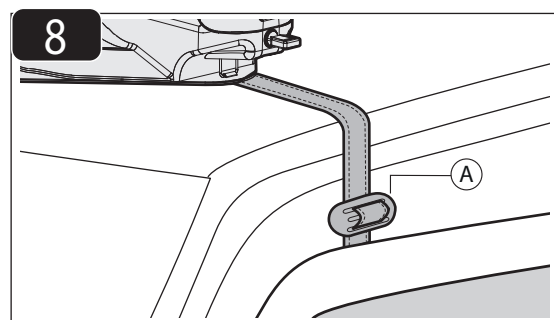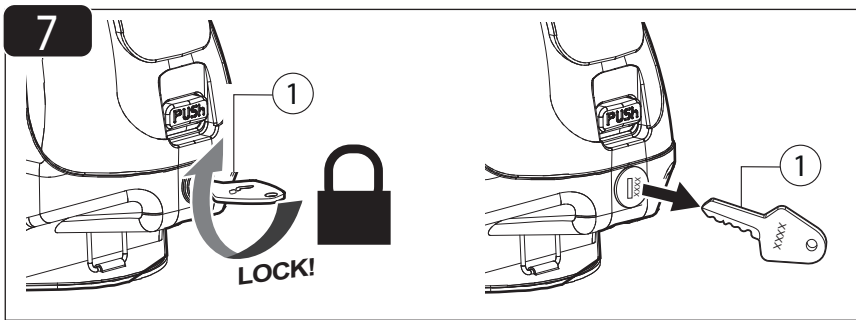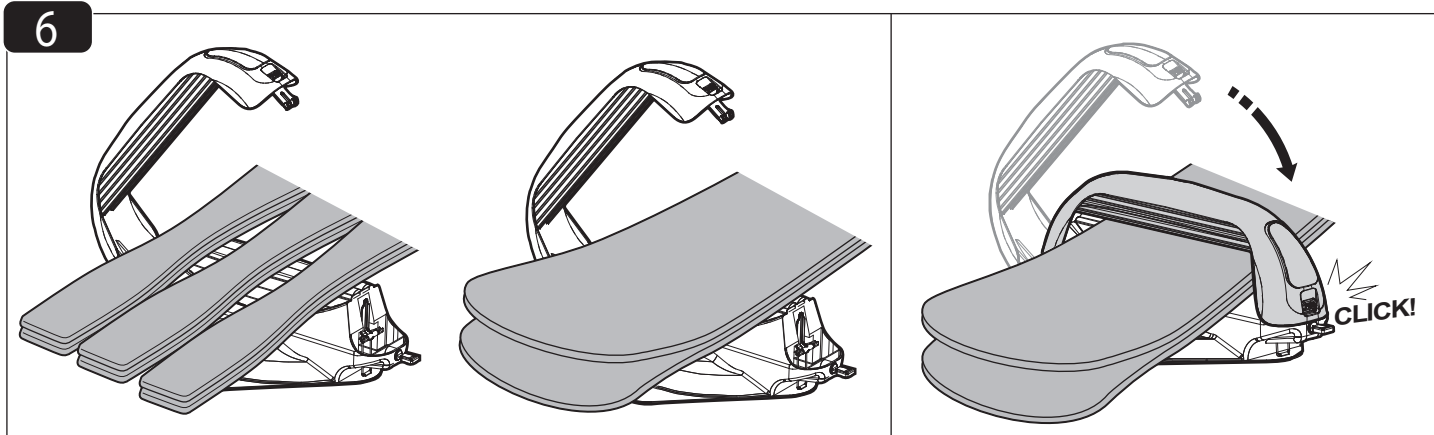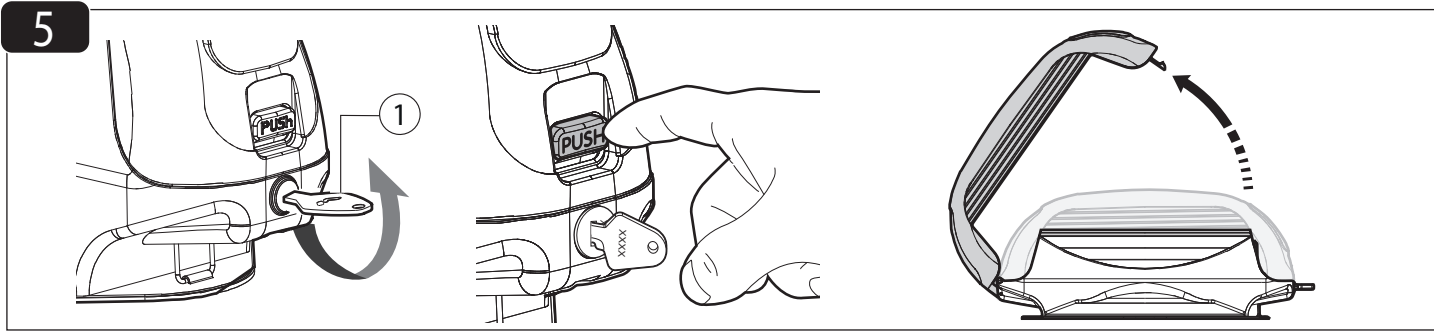

14

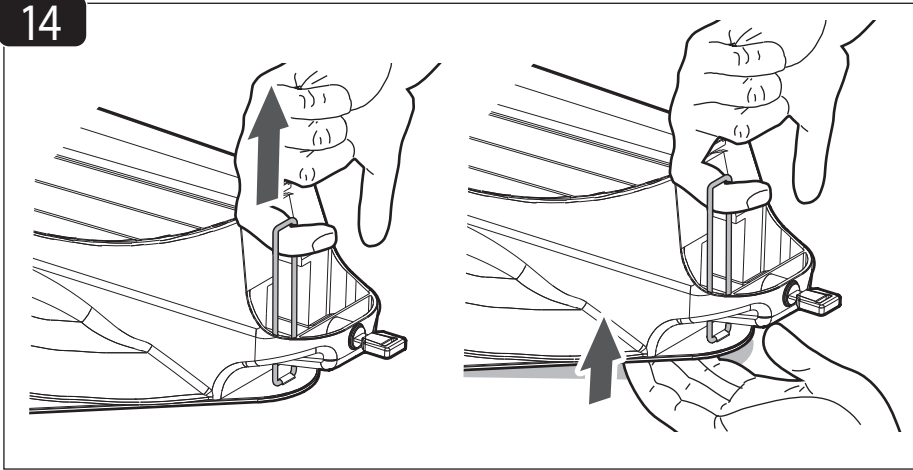

15

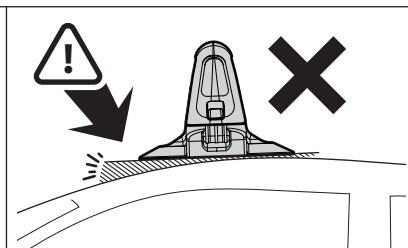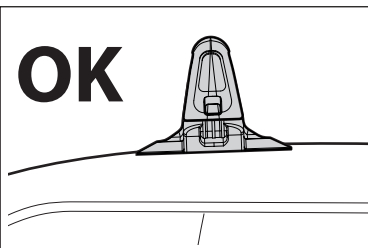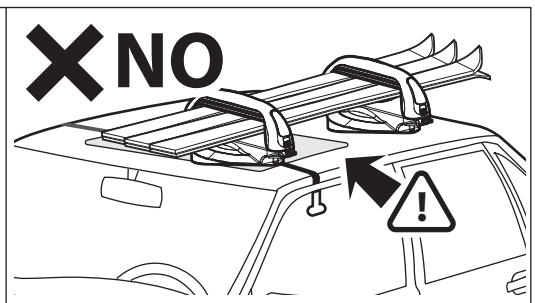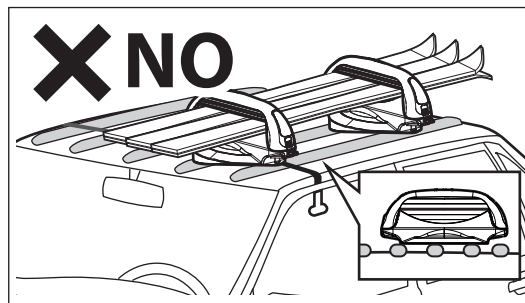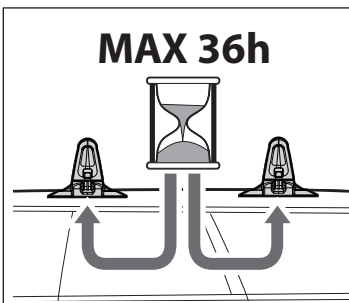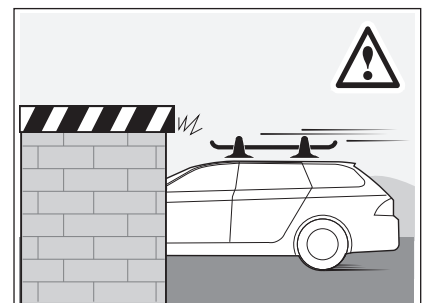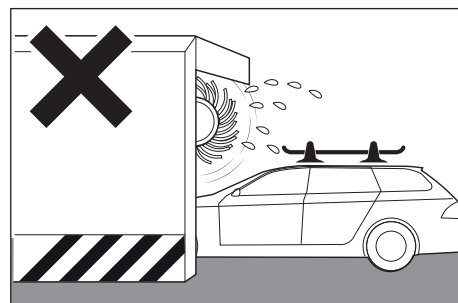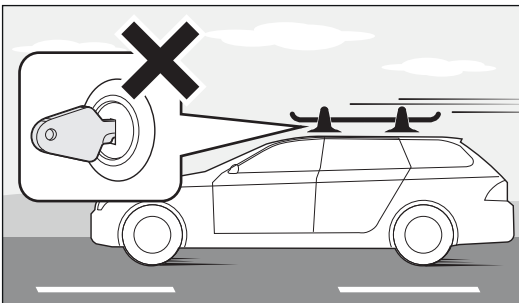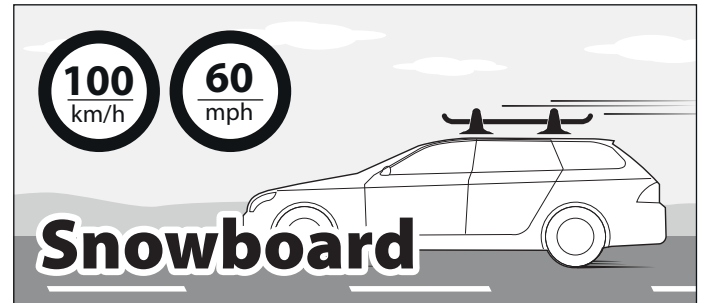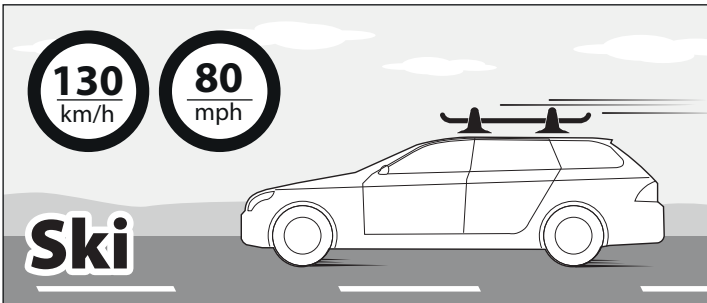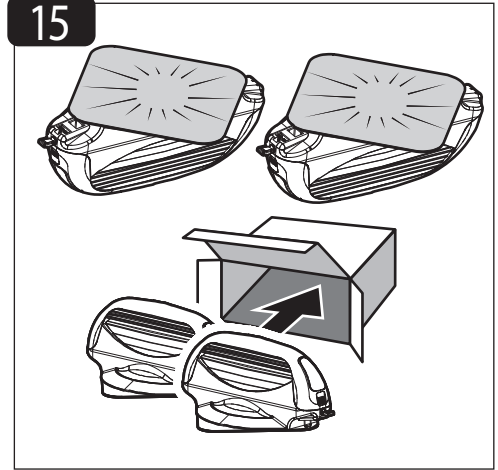

<p>Car Manual</p>	<p>ACONCAGUA</p>	<p>MAX 7kg 15.4 lb</p>	<p>MAX 7kg 15.4 lb</p>
<p>5,5 kg 12.1lb</p>	<p>x3</p>	<p>x2</p>	

Prodotto da:  
**F.lli Menabò s.r.l.**  
 Via 8 Marzo 3,  
 42025 Cavriago (RE), Italy  
 Tel. +39-0522/942840  
 info@flli-menabo.it  
 www.menabocaraccessories.com

Cod.Istr.	Data
100022800002	24/08/2020